

# 92



**EUROTHERM  
CONTROLS**

## Alarm Unit



**Product  
data**

## 92 Alarm Unit

The Model 92 is a full-featured safety alarm unit that provides affordable, back-up protection for plant equipment and personnel. The high reliability and integrity built into the Model 92 make it the solution to growing requirements for safety and overtemperature alarms.

Eurotherm Controls design and manufacturing of the Model 92 combine the latest technology and exceptional engineering to produce an alarm unit that satisfies a wide range of uses. A single universal version of the instrument enables the user to quickly set it up from the front panel for the specific application. Even with this flexibility, the user interface remains clear and straightforward while providing protection from inadvertent parameter changes.

**Alarm unit configuration** - Configuring the alarm unit sets up the instrument for the intended application. The user can specify the alarm function, input type and range, display units, etc. This information is presented in a 4 - digit configuration code (the same as in the Ordering Code shown over) viewable in the upper display for a few seconds after the instrument is powered up. The operator can modify the settings at this time if required. Configuring the Model 92 takes less than a minute.

**Failsafe alarm** - Each channel of the Model 92 can be configured to act upon one of 6 input alarm conditions including rate-of-change (see Specification). The relay outputs are failsafe (relay de-energized during an alarm condition) and independently configurable for latching or non-latching operation.

Red annunciation LEDs on the front panel flash whenever the measured value is in an alarm condition, and are OFF when the measured value is in the safe condition. A third state, where the LEDs are ON (steady), occurs for latching operation only. This signifies that the operator has acknowledged the terminals.

**Sensor break alarm** - If the alarm unit detects that the sensor circuit has failed, then the SnSr FAIL annunciation is displayed and the output relays (if enabled) go into the alarm state. If latching operation has been configured, the sensor fail alarm behaves like a latching alarm and requires operator attention.

**Power fail alarm** - The Model 92 can be configured to place both output relays into the alarm state upon powering up after a power failure. If this type of operation is not selected, the unit still remembers the alarm(s) existing before the power failure and appropriately sets the relays and the LEDs. (latching configuration only)

**Linear inputs** - The Model 92 offers 2 methods for entering and scaling linear inputs to accommodate various types of input sensors. The first method, "Linear a," involves entering co-ordinates for the 2 scaling points. The other, "Linear b," requires entering co-ordinates for only one point and then a span. With both methods, the unit can directly read the actual input signal, or the user can enter the equivalent signal value with the front panel pushbuttons.

**Mechanical features** - Neat, clean-cut design throughout is the hallmark of the Model 92. The trim, uncluttered front panel design enhances control panel installations and the splash-proof (IP54) front panel is easy to keep clean.

Installation of the Model 92 is a simple procedure. The panel mounting clip simply slides on from the rear. The rear terminal pressure plates rise up with the screw heads for fumble-free wire insertion in tight installations.

## TECHNICAL SPECIFICATION Quoted at 25°C unless otherwise stated

### Inputs

General	Sample Period Sensor Break Detection	5Hz 200mS Set within display range
Thermocouple	Standards Calibration Accuracy (Max error) For temperatures >0°C For temperatures <0°C  Linearisation CJC Rejection Ratio CJC Loop Resistance	British BS4937 (1973) German DIN 43710 US ASTM E230 (1972) B,C, E, J, L, K, N, PLII, R, S, T  See Input Sensor table ±0.25% of reading ±total offset error ±0.5 I.s.d. where total offset error (°C) = 0.25°C + (α25 + 12)/αT and α 25 (µV/°C) = Seebeck coefficient at 25°C αT (µV/°C) = Seebeck coefficient at input temperature Better than +/-0.25°C 15:1 (with internal detector) Internal Maximum resistance with no effect on reading is 1000Ω
RTD	Standards Calibration accuracy Linearisation Bulb Current Connection Maximum Lead Resistance	British BS1904 German DIN 43760 PT100 (maximum error) ±0.25% of reading ±1°C ±1/2 I.s.d. Better than 0.1°C 225µA typical 3 wire automatic lead resistance compensation 20Ω per lead
Linear	Range  Calibration accuracy Scaling methods Recommended scaling Source impedance	-10 to 70mV without adaptor -20 to 200mV, -0.1 to 1 Volt, -0.5 to 5Volts, -1 to 10 Volts, -2.5 to 25 Volts, -2 to 20mA with input adaptor  ±0.25% of reading ± 1/2 I.s.d. Non-interactive 2-point scaling, or single point and span (Front Panel entry) 1 I.s.d. ≥ 10µV 1000Ω including leads (Maximum)

### Alarms

General	Relays	Maximum 264V 2A into resistive load Minimum load voltage 10V peak (isolated from all other circuits)
	Hysteresis	1°C or 1°F to upper range limit (1 process unit I.s.d. to upper range limit)
	Type	Full scale high/low, deviation high/low, band, Sensor break and Rate of change
	Relay action	Failsafe (alarm state affirmed by de-energised relay)
	Relay drive signal source	Independently selectable from one of the 6 measured value alarms, sensor break alarm or disabled
Measured value	Output test (for each output relay)	Front panel pushbutton sequence momentarily toggles relay from current state
	Range	Alarms may be set over complete configured instrument range
	Annunciation during Alarm	Flashing Red <b>AL1</b> or <b>AL2</b> light as appropriate. For latching operation, lamp becomes ON when acknowledged but not yet cleared.
Sensor Break	Alarm Action	Non-latching or latching
	Alarm Condition	Input open or measured value < -40mV or > +90mV
	Annunciation during Alarm	Flashing <b>Snsr</b> alternating with <b>FAIL</b>
	Reaction time	5 seconds Maximum
Rate of change	Alarm Action	Non-latching or latching
	Alarm condition	Absolute value of the change of the measured value exceeds the alarm setpoint, i.e: -the alarm trips on both positive and negative changes that exceed the setpoint
	Setpoint adjustment range	Temperature units, 1 to 3000°C/min or 1 to 5400°F/min Process units, 1 to 3000, 0.1 to 300.0 or 0.01 to 30.00 process units/min
	Annunciation during Alarm	Flashing Red <b>AL1</b> or <b>AL2</b> light as appropriate. For latching operation, lamp becomes ON when acknowledged but not yet cleared.
Power Fail	Alarm Action	Non-latching or latching
	Alarm condition	Loss of power to alarm unit
	Annunciation after power failure	Normal startup sequence, then flashing red <b>AL1</b> and/or <b>AL2</b> lights (for enabled outputs only)
	Acknowledgement and Reset	Front panel pushbutton sequence, or momentary contact pushbutton connected to rear terminals
Alarm Memory	Alarm Action	Latching
	Non-latching operation	Alarm annunciation disappears and relay energizes as soon as alarm condition has been cleared
	Latching operation (for all types of alarms, if selected)	Alarm annunciation disappears and relay re-energises only if the alarm condition has cleared and operator has acknowledged alarm by resetting channel. Order of operations unimportant. Alarms existing before a power failure are reaffirmed upon power reinstatement.
	Reset (acknowledgement)	Front panel pushbutton sequence, or momentary contact pushbutton connected to rear terminals
	Number of latching	25,000 operations (maximum)



## ORDERING CODE

### Calibration for Linear Inputs

Basic Product	Alarm 1 Function	Alarm 2 Function	Sensor	Display Units	Input Signal			Display Range			
					Lower Limit	Upper Limit	Units	Lower Limit	Upper Limit	Units	
92	0	0									

Basic Product	Code
92 Standard configuration	92

Alarm 1 and 2 Functions Latching Operation	Code
Off (no alarm function)	0
Deviation low alarm	1
Deviation high alarm	2
Deviation band alarm	3
Full scale low alarm	4
Sensor break alarm	5
Full scale high alarm	6
Rate-of-change alarm	8

Non-latching Operation	Code
Deviation low alarm	9
Deviation high alarm	A
Deviation band alarm	B
Full scale low alarm	C
Sensor break alarm	D
Full scale high alarm	E
Rate-of-change alarm	F

Sensor Type	Code
RTD - 100ΩPt, DIN43760/BS1904	0
B-Pt - 30%Rh/Pt-6%Rh	1
C-W-5%Re/W-26%Re (Hoskins)	2
E-Chromel™/Adams constantan	3
J- Fe/SAMA constantan	4
K- Chromel™/Alumel™	5
L- Fe/constantan	6
N- NiCroSil/NiSiI	7
Platinel™	8
R-Pt-13%Rh/Pt	9
S-Pt-10%Rh/Pt	A
T-Cu/Adams constantan	B
Linear a -2 point entry scaling	C
Linear b- point and span entry scaling	D

Display nits, Remote Ack., Power Fail Alarm <sup>(1)</sup>			
Display	Rem Ack	Pwr Fail Alarm	Code
°C	AL1 & 2	no	0
°C	AL1 & 2	yes	1
°C	AL1	no	2
°C	AL1	yes	3
°C	AL2	no	4
°C	AL2	yes	5
°F	AL1 & 2	no	6
°F	AL1 & 2	yes	7
°F	AL1	no	8
°F	AL1	yes	9
°F	AL2	no	A
°F	AL2	yes	B

#### Accessories

CZ140398	RC snubber network <sup>(2)</sup>
B0133297	1/16DIN front panel gasket
BD133125	Rear terminal cover <sup>(3)</sup>
FY133264U001	Rear terminal cover, screw <sup>(3)</sup>
CAG3R01	Input shunt resistor <sup>(4)</sup>
SUB90/SPARE/ACCESSORY/92	Accessory kit <sup>(5)</sup>

Coding example:

92/0/0/6/4/5/0

Alarm 1 - Full scale high (latching),

Alarm 2 - Full scale low (latching),

type K thermocouple input,


Remote Ack Alarm 1 & 2,

No power fail alarm

#### Notes:

- Display units selection for temperature inputs only  
Remote Ack; selection irrelevant for non-latching alarms
- External RC snubber network required across relay contacts when driving ac inductive loads (mechanical contactors and solenoids). DO NOT USE SNUBBERS WHEN DRIVING HIGH IMPEDANCE LOADS!
- Order rear terminal covers and screws in sets one screw and cover required per unit.
- 3.01Ω, 1%, 0.25W, ±100ppm resistor required for 4-20mA or 0-20mA inputs.
- Includes 2 snubbers and 1 each of the other accessories.


## REAR TERMINAL CONNECTIONS

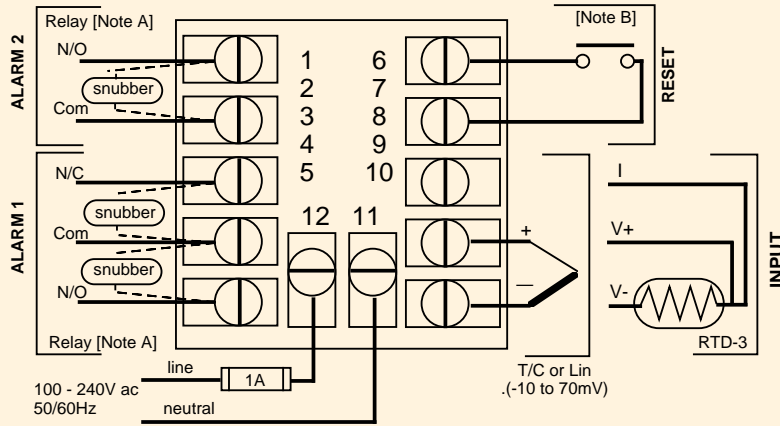

### NOTES:

- N/C and N/O refer to the condition of the relay contacts when the relay is not energized; i.e. when the relay is in the alarm condition or when power is not applied to the controller.
- Optional momentary contact pushbutton to latching alarm reset. The reset input is not isolated from the measurement input and must NEVER be connected to ground or to any other circuit.

## DIMENSIONAL DETAILS

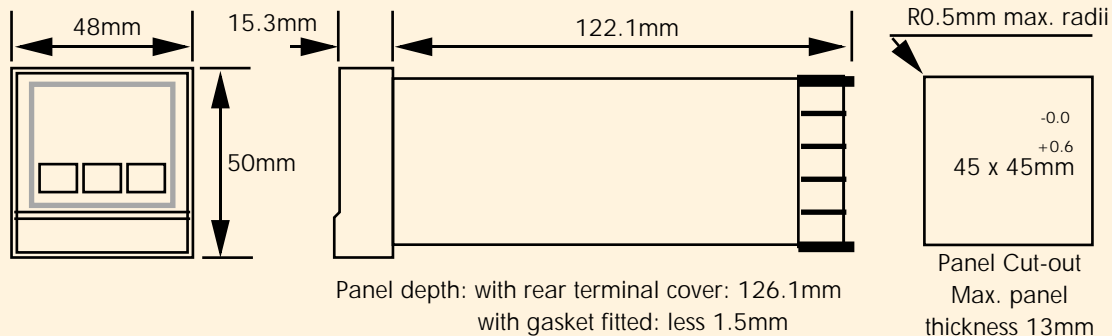

## EUROTHERM CONTROLS LIMITED

### UK Region sales and service

#### SOUTHERN AREA

Home Counties, South and South East  
Eurotherm Controls Limited  
Faraday Close, Durrington  
Worthing  
West Sussex BN13 3PL  
Telephone Sales: (01903) 695888  
Technical: (01903)695777  
Service: (01903) 695444  
Fax (01903) 695666  
Telex 87114 EUROWG G

#### MIDLANDS AREA

Midlands, South Wales, East Anglia and South West  
Eurotherm Controls Limited  
Miller House  
Corporation Street  
Rugby Warwickshire CV21 2DW  
Telephone (01788) 562011  
Fax (01788) 536249

#### NORTHERN AREA

Northern Counties, North Wales and Scotland  
Eurotherm Controls Limited  
4/5 Chetham Court  
Calver Road, Winwick Quay  
Warrington  
Cheshire WA2 8RF  
Telephone (01925) 572111  
Fax (01925) 413099

### Sales and support in over 30 countries worldwide

For details of your local supplier contact:

Eurotherm Controls Limited  
Faraday Close, Durrington  
Worthing  
West Sussex BN13 3PL  
England  
Telephone (01903) 268500  
Telex 87114  
Fax (01903) 265982

© Copyright Eurotherm Controls Limited 1996

All rights strictly reserved. No part of this document may be stored in a retrieval system, or any form or by any means without prior written permission from Eurotherm Controls Limited. Every effort has been taken to ensure the accuracy of this specification. However in order to maintain our technological lead we are continuously improving our products which could, without notice, result in amendments or omissions to this specification. We cannot accept responsibility for damage, injury loss or expenses resulting therefrom.